

PT Series	Spülmaschine einschalten	Spülen
	<p>1</p>	<p>1</p>
	<p>2</p>	<p>2</p>
	<p>3</p>	<p>3</p>

Spülmaschine ausschalten und reinigen

The sequence of images illustrates the following steps:


- Pressing the power button on the control panel.
- Pressing the stop button (represented by a fan icon) on the control panel.
- Pressing the stop button for 2 seconds to fully stop the cycle.
- Opening the dishwasher door.
- Removing the lower cutlery tray to access the filter.
- Removing the filter and cleaning it with a brush.
- Cleaning the spray arm.
- Cleaning the door gasket.
- Reinstalling the filter and closing the door.
- Pressing the stop button on the control panel.
- Opening the door and cleaning the upper cutlery tray.
- Cleaning the spray arm.
- Cleaning the filter.
- Pressing the stop button on the control panel.

Oberes und unteres Spülfeld reinigen




Oberes und unteres Spülfeldlager reinigen




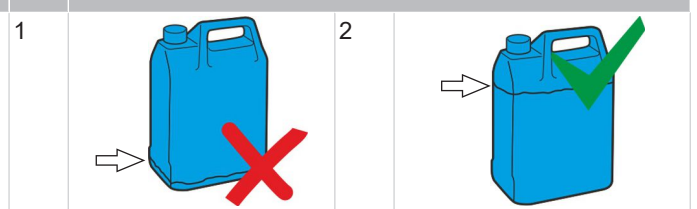
 Salz nachfüllen



 Reinigerkanister / Entschäumerkanister tauschen



 Klarspülerkanister tauschen



Mehr Informationen: Siehe Betriebsanleitung
www.winterhalter.com/download-centre